

---

 
**TOASTER**

**BROODROOSTER**

**TOSTADOR**


**TORRADEIRA**

**ΦΡΥΓΑΝΙΕΡΑ**

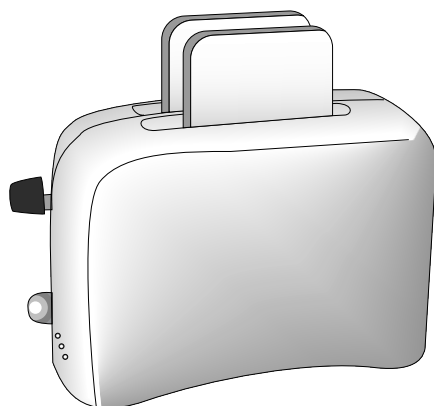


Instructions for use  
Mode d'emploi  
Gebrauchsanweisung  
Istruzioni per l'uso  
Gebruiksaanwijzing  
Instrucciones para el uso  
Instruções de uso  
Οδηγίες χρήσης

 ---

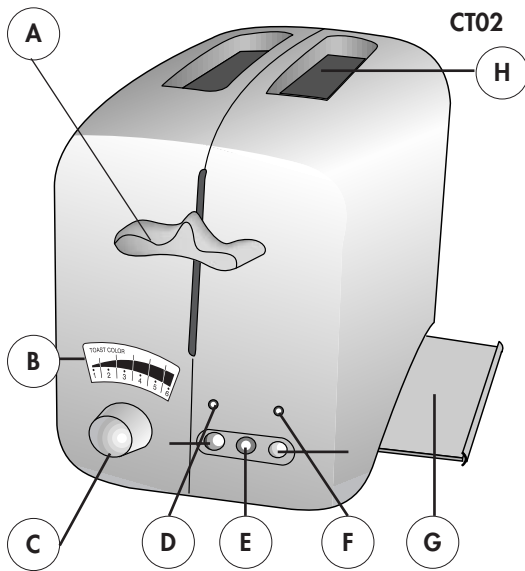

CT02

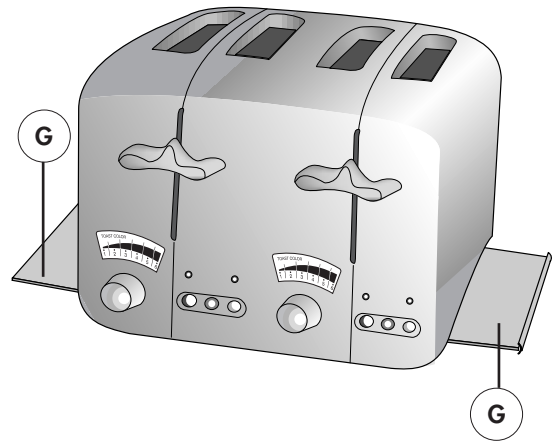 

CT04

## ENGLISH

### DESCRIPTION OF APPLIANCE

- A) ON lever
- B) Darkness viewer
- C) Darkness setting dial
- D) Warning light and "Defrost" button
- E) Stop/clear button
- F) Button and warning light for one side toasting
- G) Crumb collection tray
- H) Bread toasting slots

## FRANÇAIS

### DESCRIPTION DE L'APPAREIL

- A) Levier de mise en marche
- B) Indicateur degré de grillage
- C) Bouton de réglage du degré de grillage
- D) Voyant lumineux et bouton poussoir "Defrost"
- E) Bouton poussoir Stop/Clear
- F) Bouton poussoir et voyant lumineux pour le grillage sur un seul côté
- G) Tiroir ramasse-miettes
- H) Ouvertures de chargement

## DEUTSCH

### GERÄTEBESCHREIBUNG

- A) Einschalthebel
- B) Sichtanzeige Bräunungsgrad
- C) Einstell-Drehknopf Bräunungsgrad
- D) Kontrollampe und Schalter Defrost (Auftauern)
- E) Schalter Stop/Löschen
- F) Schalter und Kontrollampe zum Toasten von nur einer Seite
- G) Krümelblech
- H) Toasteinführschlitze

## ITALIANO

### DESCRIZIONE DELL'APPARECCHIO

- A) Leva accensione
- B) Indicatore grado di tostatura
- C) Manopola regolazione grado di tostatura
- D) Spia e pulsante "defrost"
- E) Pulsante stop/clear
- F) Pulsante e spia per tostatura singolo tasto
- G) Vassoio raccoglibriciole
- H) Bocche di caricamento

## NEDERLANDS

### BESCHRIJVING VAN HET APPARAAT

- A) Hendel voor het aanzetten
- B) Aanduiding bruiningsgraad
- C) Draaiknop regulering bruiningsgraad
- D) Controlelampje en drukknop "defrost"
- E) Drukknop Stop/clear
- F) Drukknop en controlelampje voor het roosteren aan één kant.
- G) Kruiemelopvangblad
- H) Broodsleuven

## ESPAÑOL

### DESCRIPCION DEL APARATO

- A) Palanca encendido
- B) Visor grado de tostado
- C) Manopla regulación grado de tostado
- D) Señal luminosa y pulsador "defrost"
- E) Pulsador stop/clear
- F) Pulsador y señal para tostado cada botón
- G) Bandeja recoge migas
- H) Bocas de carga

## PORTUGUÊS

### DESCRIÇÃO DO APARELHO

- A) Alavanca de ligar
- B) Visor do grau de torração
- C) Botão de regulação do grau de torração
- D) Luz-piloto e botão "defrost"
- E) Botão stop/clear
- F) Botão e luz-piloto para torração em uma tecla
- G) Tabuleiro para migalhas
- H) Aberturas

## ΕΛΛΗΝΙΚΑ

### ΠΕΡΙΓΡΦΗ ΤΗΣ ΣΥΣΚΕΥΗΣ

- A) Μοχλός ανάμματος συσκευής
- B) Παραθυράκι οπτικού ελέγχου φρυγανίσματος
- C) Διακόπτης ρύθμισης βαθμού φρυγανίσματος
- D) Ενδεικτικό λαμπτάκι και κουμπί "defrost"
- E) Κουμπί stop/clear
- F) Κουμπί και ενδεικτικό λαμπτάκι για φρυγάνισμα μιας πλευράς
- G) Δίσκος συλλογής ψιχουλιών
- H) Στόμια εισαγωγής

## IMPORTANT WARNINGS

- The appliance is exclusively for the use for which it has been expressly manufactured. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.  
In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
- Before inserting the plug into the electrical outlet, make certain:
  - the voltage of the outlet corresponds to the value indicated on the information label, attached to the appliance.
  - the electrical outlet has sufficient grounding capacity: **the manufacturer declines any responsibility for the lack of observation of this norm.**
- In the case of incompatibility between the outlet and the plug of the appliance, have it replaced by a qualified technician. The use of adapters, multiple socket units and/or extension cords is not recommended. Whenever it may be necessary to use such equipment, it is advisable to use only simple or multiple adapters or extension cords which comply with the current safety standards, and make sure not to exceed the voltage limit of the adapter or extension cord.
- When the appliance is plugged into the electrical outlet, and moreover, while it is turned on, never place hands into the bread toasting slots (H).
- Never allow the appliance to be used by children or used without adult supervision.

- Do not touch the appliance with wet or damp hands.
- The metal sides of the toaster and the areas surrounding the bread slots (H) become very hot during use: control the appliance touching only the plastic dials and handles.
- Bread is a foodstuff which may catch fire. Do not use this appliance under or next to curtains or other combustible material.
- Do not cover the appliance while it is in use.
- Do not use the appliance with bare or wet feet.
- Unplug the appliance from the electrical outlet when it is not in use.
- Do not leave the appliance on when not being used as this may be potentially dangerous.
- Do not unplug the appliance from the outlet by pulling on the cord.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Before doing any cleaning or operation, unplug the appliance from the electrical outlet. Do not immerse the appliance, the plug, or the electrical cord in water.
- In case of break down or improper functioning of the appliance, turn off the appliance without tampering with it. For necessary repairs and for the substitution of the electrical cord, consult the technical service centre authorised by the manufacturer.

This appliance conforms to the Directive 89/336/CEE relative to electromagnetic compatibility.

The materials and the objects destined for contact with food products are in compliance with the regulations of the EEC directive 89/109.

## USE OF THE COMMANDS (MOD. CT02)

- Make sure that the lever (A) is raised and the dial (C) is set for a medium toasting level.
- Connect the appliance to the electrical outlet. **In order to eliminate the “new” smell at the first use, operate the appliance without any food inside for at least 5 minutes. Aerate the room during this operation.**
- Insert the slices of bread into the bread toasting slots (H) and lower the lever (A) until it is all the way down.

Note: If the appliance is not connected to the electrical outlet, the lever will not go all the way down.

- When the toasting is finished, the lever returns to the up position, raising the toasted bread slices at the same time.
- If the bread is not sufficiently toasted, select a darker degree of toasting by turning the dial (C). If it is too dark, select a lesser degree of toasting.
- The toasting can be interrupted at any time by simply pressing the stop/clear button (E).

### Defrost function

You may toast slices of frozen bread by pressing the defrost button immediately after having lowered the lever (A); the cooking cycle will be lengthened in order to achieve the desired toasting level. The red warning light will remain lighted while the defrost function is in use.

### Single side toasting

The “one side toasting” function allows for the toasting of muffins, bread etc. on one side only.

Muffins must first be sliced in half and inserted with the cuts sides facing out; lower the lever and press the one side toasting button.

The red warning light will remain lighted while the one side toasting function is in use.

## USE OF THE COMMANDS (MOD. CT04)

This model is used as if there were two distinct (MOD CT02) units.

### SUGGESTIONS

- Never use the appliance when it is empty (when there is no bread inserted).
- Do not use very thin or broken slices of bread.
- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires. It is also very important to clean the crumb collection tray of any drippings before each use.
- Do not insert (by force) foods that are too big for the slots.
- **Do not insert forks or other utensils into the toaster in order to remove bread**, in so far as it may damage the resistance coils of the appliance. Remove the plug from the outlet and turn the appliance over, gently shaking it to remove the lodged item.

### CLEANING AND MAINTENANCE

- Any cleaning and/or maintenance operation must be done after having removed the plug from the electrical outlet.
- Let the appliance cool down before proceeding with its cleaning.
- The external part of the appliance must be cleaned with soft cloth. Do not use abrasive detergents which could ruin the surface.
- DO NOT IMMERSE IN WATER.
- After each use, remove the plug from the electrical outlet and empty the crumb collection tray which is situated under the appliance.
- If a toast slice should become lodged in the toaster, unplug the appliance, turn it upside down, and shake the toaster gently.
- NEVER TOUCH ANY PART OF THE TOASTER WITH SHARP UTENSILS, ESPECIALLY INSIDE THE BREAD TOASTING SLOTS.